

Purpose

Technique WSUNITS sets whether water supply units are to be used in Function ESP.

Valid values are NO (0) and YES (1).

The Global default value is NO (0).

This Technique is Universal.

Technique METRIC is used with Technique WSUNITS to specify whether English or Metric water supply units are to be used.

Form of Input

WSUNITS(integer)

where integer is 1 or 0 specifying whether or not water supply units are to be used

Example

WSUNITS(1)

Water supply units will be used.